

DOCK ACCESSORIES

Double 12 Volt LED Flexible Canopy Light with Remote

Instructions

Part #: 1030249

Parts List	
Qty	Description
1	Battery Cable
1	RF Receiver
1	Y-Connector
1	Power Cable
2	LED Light
15	Zip Ties

Step 1. Connect the battery cable to one 12 volt battery. Attach the black wire to the negative (-) battery post and the red wire to the positive (+) battery post.

Step 2. Plug the LED controller into the battery cable. Make sure to plug in the correct side of the controller. The LED controller has one end labelled "5-24V" (left side), this is the end that should be plugged into the battery cable end.

Step 3. Plug in the controller end labelled "LED" (right side) to the Y-Connector and the "battery" end of the 16ft cables into the two Y-Connector ends. Check connections for proper polarity.


Step 4. Plug in the LED lights to the "light" end of the 16ft wire. Attach lights to canopy frame using zip ties. Use remote to turn on, off, and adjust brightness.



Pressing the "Brighter" and "Dimmer" button at the same time will initiate a strobe setting.

When the strobe setting is active, the speed can be adjusted using the "Brighter" button to flash faster and the "Dimmer" button to flash slower.

Pressing the On/Off button while in the strobe setting will turn off the strobe function.

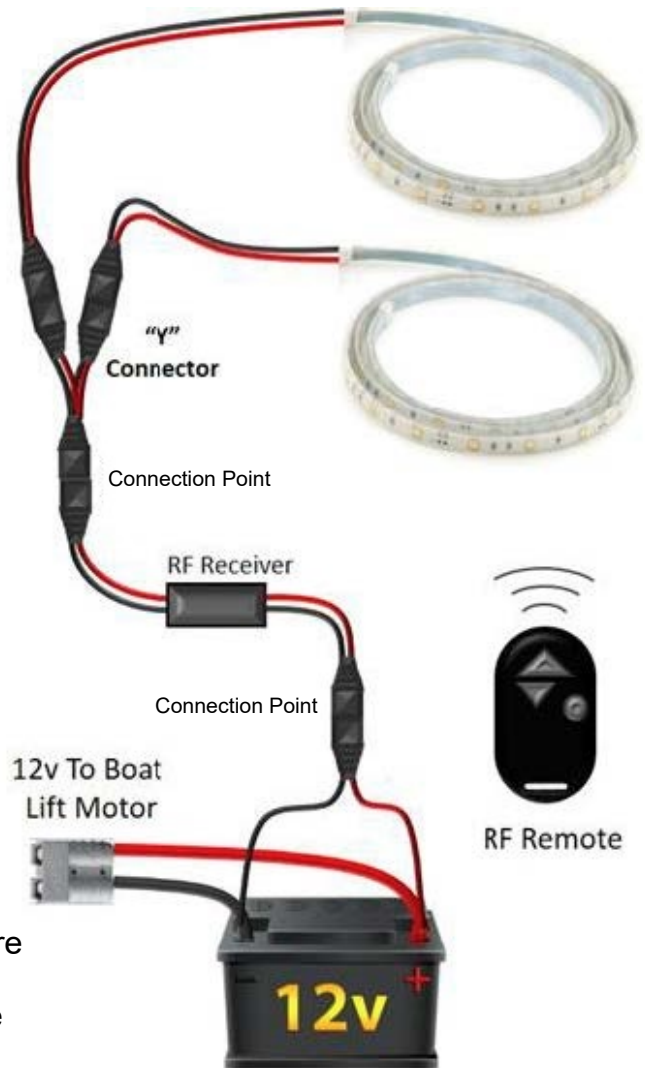

Each connection should have black wire to black wire and red wire to red wire.