


## 8ft Carpeted Horizontal Bunk Kit

### Instructions

Part #: 1027890

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	1027909	8ft Carpeted Horizontal Bunk
-	1	1027934	Hardware Box
2	4	1027885	Wdmt Horizontal Bunk Bracket
-	1	1027932	Bolt Bag
3	4	1001793	Nut Square 1/2-13 Brass
4	4	1002558	Set Screw 1/2-13 x 1.5 SS 304 Cup Point
5	4	1001802	Nut Flange 3/8-16 Brass
6	4	1026579	Bolt Carriage 3/8-16 x 2.0 SS 304

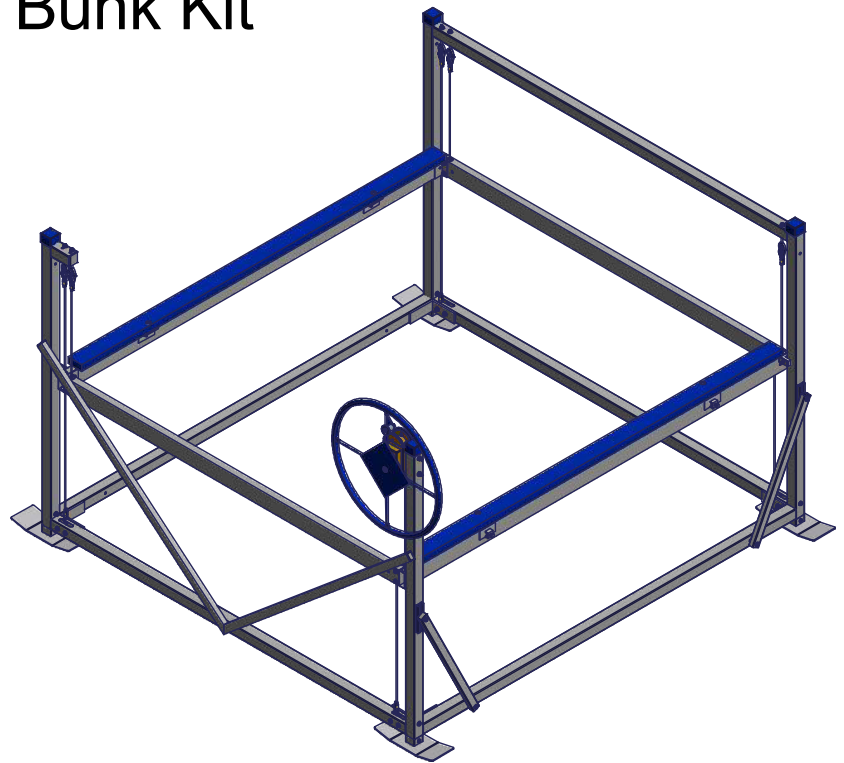

Failure to follow instructions may result in personal injury and may invalidate the applicable warranty.

**Step 1.** Place brackets onto bunks, lining up the drilled hole in the bracket with the counter sunk hole in the bunk. Insert two 3/8 x 2.0 carriage bolts into each bunk from the top through the brackets as shown. Secure using 3/8 brass flange nuts.

**Note:** Tighten carriage bolt snug and be sure they are countersunk deep enough into bunk board to not contact the watercraft.

**Step 2.** Place bunks with brackets on front and rear rack beams of lift with the carriage bolts closer to the inside of lift.

**Step 3.** Insert a 1/2 brass square nut into the nut clip of each bracket. Thread one 1/2 x 1-1/2 set screw into the brass nut and tighten securely.

