


Non Adjustable Cradle Pair

Instructions

Part #: 1007001

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	1004365	Alum Channel 2.75x.188x2.375x.125x10.25
2	2	1024111	Prt Tube 4.0 - Non Adj Cradle Leg
3	2	1005723	Non Adjustable Cradle Rubber
--	1	1002241	Bolt Bag Cradle Non-Adjustable
4	6	1001968	Bolt Carriage 5/16-18 x 1.0 SS 304
5	6	1001807	Nut Hex 5/16-18 Brass
6	2	1001802	Nut Flange 3/8-16 Brass
7	2	1001792	Nut Hex 1/2-13 Brass
8	2	1002383	Bolt Hex 1/2-13 x 3.5 SS 304
9	2	1002434	Bolt Hex 3/8-16 x 3.5 SS 304

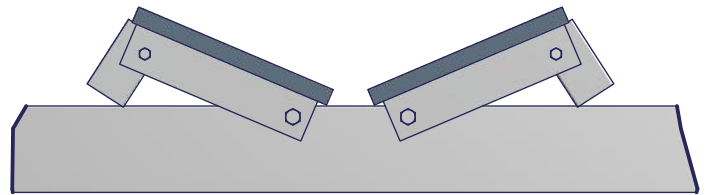

Failure to follow instructions may result in personal injury and may invalidate the applicable warranty.

Step 1. Bolt the rubber to the cradle channel using three 5/16 x 1 carriage bolts and three 5/16 hex nuts.

Step 2. Bolt the cradle leg onto the cradle channel using one 3/8 x 3-1/2 hex bolt and one 3/8 flange nut.

Step 3. Straddle the cradle channel over the top of the front rack beam, line up the hole in the cradle channel with the hole in the front rack beam and bolt in place with a 1/2 x 3-1/2 hex bolt and 1/2 hex nut - as shown.

Note: The cradle leg sits on top of the front rack beam.

